SOUND SYSTEM AND PROJECTOR

1. Starting the sound system


Complete these steps before playing music or using the microphones.

1. Turn the Projektor/Högtalare switch on the ABB panel to position 1.
2. Set CH 1 and CH 2 on the Eurolite Board 6-S to position 1.
3. Set the POWER switch on the American Audio amplifier to position 1.
4. Set the amplifier INPUT selector to AUX 5.
5. Adjust music volume with the knob beside the INPUT selector.

Do not change the subwoofer settings.



ABB panel: projector/speaker power switch.

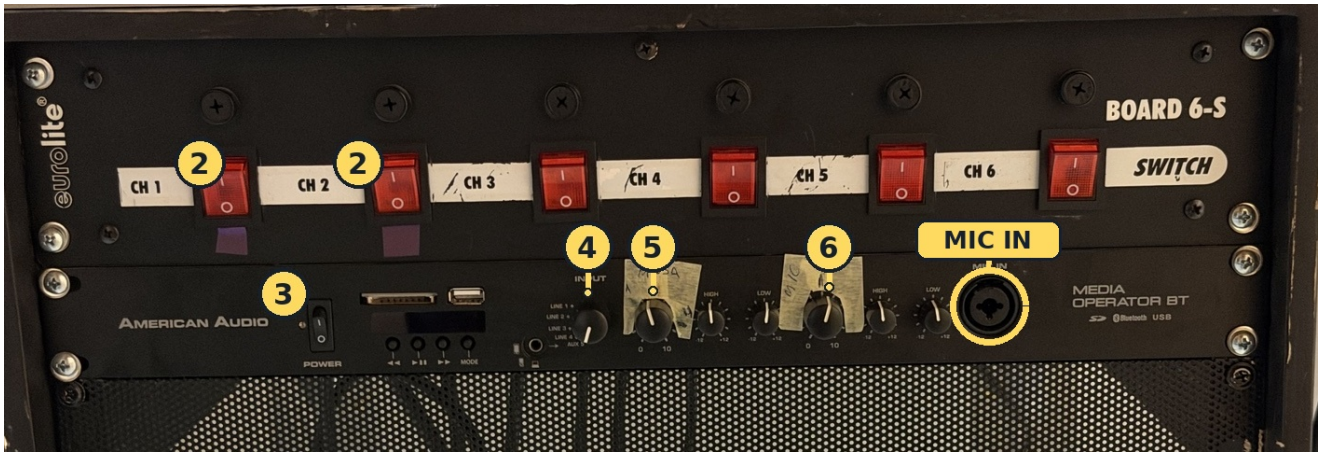

Eurolite channel switches and amplifier controls.

2. Playing music (Bluetooth)

1. Open Bluetooth settings on your phone and connect to BLUETOOTH.

2. Start playback. Use the volume knob next to INPUT on the amplifier (yellow marker 5 in the photo).

MICROPHONES

3. Using the microphones

First complete the setup on page 1.

7 Plug the wireless receiver into the amplifier MIC IN socket (marked in the page 1 photo).

• Turn on the receiver using its small ON/OFF switch.

• Check that the receiver’s blue light is on. If not, connect its charger.

• Turn on the microphone using its grey power button.

6 Adjust microphone volume with the MIC knob on the amplifier (marker 6 on page 1).



Wireless microphones and their receiver.

4. If the microphone makes no sound

Check that the microphone is on, the receiver shows a blue light and the receiver is connected to MIC IN.

If the connection is lost, pair them again:

1. Unscrew the lower part of the microphone.
2. Hold down SET until PA appears on its display.
3. Keep the microphone close to the receiver until PA disappears.
4. Test the microphone.

PROJECTOR AND TROUBLESHOOTING

5. Using the projector

1. Turn the Projektor/Högtalare switch on the ABB panel to position 1.
2. Turn on the Epson projector with the red power button on the remote.
3. (8) Connect your computer using the black HDMI cable beside the remote at the edge of the stage. You can also use the black VGA cable.
4. If needed, use Source Search on the projector or select the external display on your computer.


The white HDMI cable is not in use.



Projector remote control and HDMI cable.

6. If there is no sound

1. Check the setup steps on page 1.
2. Make sure the subwoofer POWER switch is on (position I).
3. Check that the subwoofer POWER indicator is lit blue.
4. Check the volume and, if relevant, the Bluetooth connection.

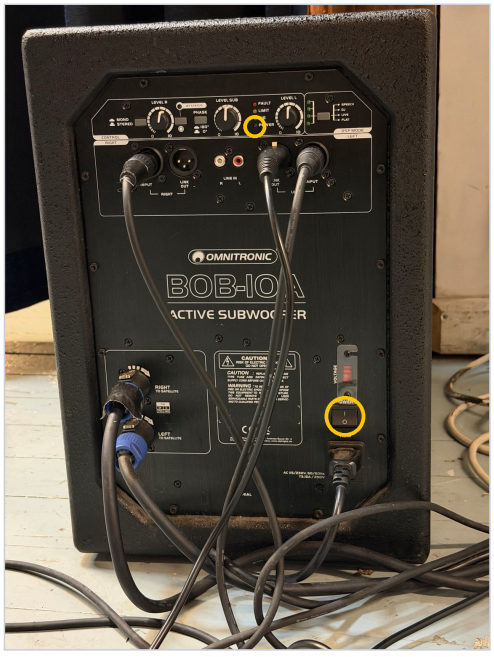

Full rear panel of the subwoofer

POWER indicator



The POWER indicator should be blue.

Power switch (I = on)

